

# Dongle time lock

## 1. How to tell the difference between new dogs SS and DBS?

(1) as shown in the figure below, the dongle number is 5218, which is inserted into the long blue indicator light at the usb tail of the computer, and is the new dog SS.



(2) as shown in the figure below, the dongle has no number, and it is a DB8 dog when plugged into the usb tail of the computer.



## 2. Drive installation

Run vc2013\_x86.exe; in the environment;

If you are operating a new dog SS, you need to install the sense dongle driver.

## 3. How to set the dongle expiration time

- (1) Plug the dongle into the USB port of the computer host,
- (2) Open the TimeLimit.exe application under the dongle time lock v5.0
- (3) Select the dongle type,
- (4) Enter the operation password (the default password is to contact the salesperson)
- (5) select time
- (6) Click write expiration time.

🕒 Set up
✕

Dongle type SS Dog **1** ▼

Operation password ●●●●●●●● **2**

2022-12-30 **3** ▼
Write expiration time **4**
Contact expiration time

The customer operates

Generate time authorization

Reset the operation

Rewrite the password

Note: All products of this company can set the time lock through this software, and each manufacturer set their own

#### 4. How to cancel the expiration time of dongle?

- (1) insert the dongle into the USB port of the computer host.
- (2) Open the TimeLimit.exe
- (3) Choose the type of dongle,
- (4) Enter the operation password (the default password is to contact the salesperson)
- (5) Choose the time
- (6) Click Cancel Expiration Time.

🕒 Set up
✕

Dongle type SS Dog **1** ▼

Operation password ●●●●●●●● **2**

2022-12-30 **3** ▼
Write expiration time
Contact expiration time **4**

The customer operates

Generate time authorization

Reset the operation

Rewrite the password

Note: All products of this company can set the time lock through this software, and each manufacturer set their own

## 5. How to generate a time authorization file

Without telling the customer the operation password, send the generated file to the customer and load it into the software to renew it.

- (1) insert the dongle into the USB port of the computer host.
- (2) Open the TimeLimit.exe
- (3) Choose the type of dongle,
- (4) Choose the time
- (5) Enter the operation password of the customer.
- (6) Click Generate Time Authorization.
- (7) Send the kllicensedate file in the folder to the customer, put it in the exe program directory, and run it once to complete the renewal.

Set up

Dongle type: SS Dog **1**


Operation password:

2022-12-30 **2**

The customer operates: 123123 **3** 4

Reset the operation:

Note: All products of this company can set the time lock through this software, and each manufacturer set their own

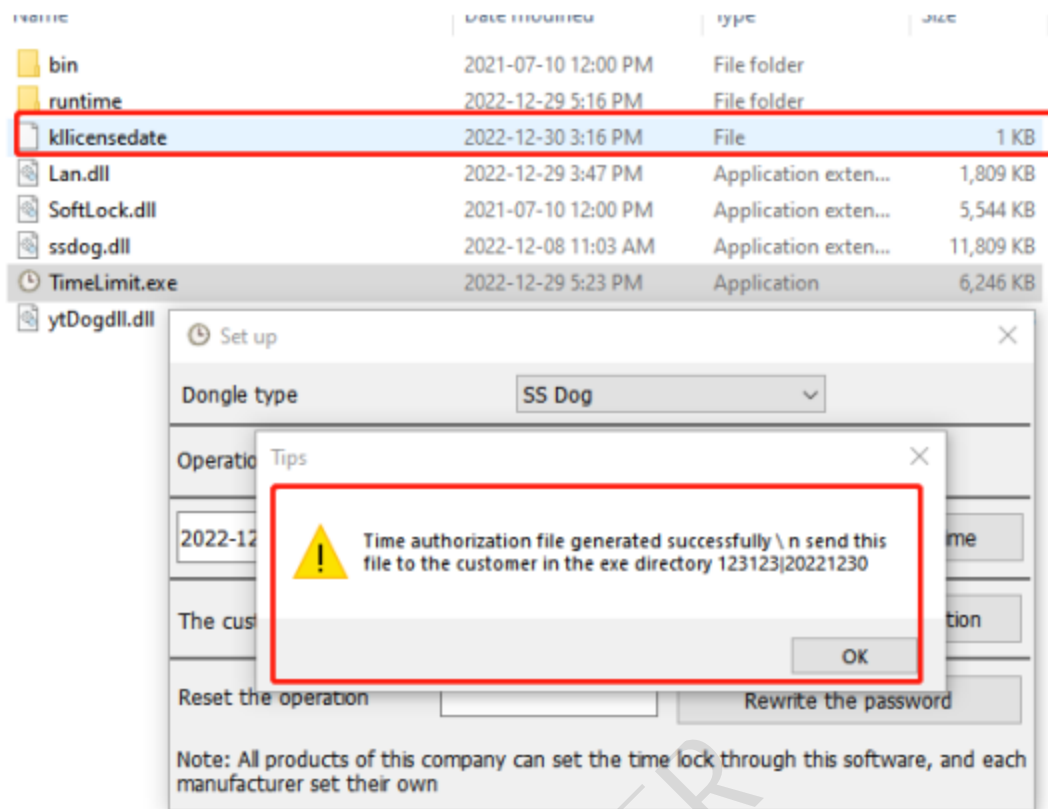

## 6. How to change the operation password

- (1) insert the dongle into the USB port of the computer host.
- (2) Open the TimeLimit.exe
- (3) Choose the type of dongle,
- (4) Enter the operation password (the default password is to contact the salesperson)
- (5) Enter the reset operation password.
- (6) Click Rewrite Password.

🕒 Set up ✕

Dongle type  <sup>1</sup>

Operation password  <sup>2</sup>

2022-12-30

The customer operates

Reset the operation  <sup>3</sup>  <sup>4</sup>

Note: All products of this company can set the time lock through this software, and each manufacturer set their own

KLEADER